



**File Name:** bose 321 sound system manual.pdf

**Size:** 3729 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 7 May 2019, 17:55 PM

**Rating:** 4.6/5 from 815 votes.

**Status:** AVAILABLE

Last checked: 13 Minutes ago!

**In order to read or download bose 321 sound system manual ebook, you need to create a FREE account.**

**[Download Now!](#)**

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bose 321 sound system manual . To get started finding bose 321 sound system manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# bose 321 sound system manual

It will help you set up and operate your system properly, and enjoy all of its advanced features. Yet its few parts require little effort to set up, so you can enjoy your new system's performance right. Dolby Digital is the most common means of encoding audio for DVDVideo. It is the width of the picture relative to the height. Save all packing materials, which provide the safest way to transport your system. Check to be sure your system includes the parts shown in Figure 1. If any part of the system appears damaged, do not attempt to use it. Notify Bose or your authorized Bose sheet included in the carton. The Acoustimass will connect to a power outlet. For ordering information, refer to "Accessories" on page 46. Figure 8 System placement for ideal coverage CAUTION Be sure to read the section on making the connections before you plug in the system. Figure 12 Making the left and right speaker connections Note When properly inserted, there will be a small gap between the plug and the speaker panel. Unwind the wires for each antenna to provide the best reception. Note An outdoor antenna may be used in place of the two that are supplied. Note If your TV does not have an audio output jack, see "If your TV does not have audio out put jacks". This cable may be purchased from your Bose dealer or a local electronics retailer. Before you proceed, you must determine if your TV has audio output jacks. Consult your TV owner's guide if you need assistance. When the TV is on, the words "VIDEO 1", "VIDEO 2", or "AUX". For this type of connection, you will need one additional video cable, which can be purchased at your local electronics store. Figure 22 AUX input connections Connecting other playback equipment Other playback components, such as an audio CD changer, can be connected to the AUX inputs on the rear panel of the media center Figure 22. Or, you can press any source button on the remote to select the source and turn the system on at the same

time. <http://www.dostrojarsk/UserFiles/computer-search-and-seizure-manual.xml>

- **bose 321 sound system manual, bose 321 sound system manual download, bose 321 sound system manual pdf, bose 321 sound system manual free, bose 321 sound system manual software.**

See "Selecting the correct video input on your TV". To contact Bose for information on how to purchase the remote separately, refer to the address sheet included with the system. Control panel and buttons The media center has eight buttons located on the top control panel. To enter the Settings menu Before you begin, make sure you have selected the correct Video Input setting on your TV. To check the system status Figure 27 A DVD status example Settings DVD You can also press any source button on the remote to turn the system on and select the source at the same time. The 8 levels of parental control correspond with the ratings on DVDs, and are usually equivalent to standard movie ratings provided by the Motion Picture Association of America MPAA. For more details on changes you can make to the settings, refer to the Sound Adjustments and System Adjustments sections of this guide. For more details on changes you can make to the settings, refer to the Sound Adjustments and System Adjustments sections that follow in this guide Selection CD setting options Sleep Timer. To store a particular station 1. Automatically engages Bose Dolby Digital bitstream indicates that it contains a mono program. A menu of the available settings for the current source will be displayed on your TV screen. 3. Using the Tune 4. DVD Setup Video Format Video Black Level DVD Setup submenu The DVD Setup submenu lists options for how the DVD player should operate, including Parental Control. This allows the unit to reset itself. After reconnecting the power cord, wait for the message, "BOSE 321" to appear on the media center display. Details of the warranty are provided on the warranty card that came with your system. Learn

more or change settings here. Just type your request below Quick tip Try searching for just one or two words e.g., connection help. Buy Bose 901 Series VI Active Equalizer Version 2 110V features Designed bose 901 setup, bose 901 eq, bose 901 eq for sale, bose 901 Bose

3.2. [http://riolisboa.com/images/ul\\_files/ThKCcoEgDtG1.xml](http://riolisboa.com/images/ul_files/ThKCcoEgDtG1.xml)

1 GS Series II User Manual Bose Home Theater Systems. Text mode; Bose 3.2 1 li Manual Bose 321 Series II Manual Online Media Center Options. Figure 30 Media Bose 3.2.1 GS Series II, 3.2.1 Series II Owners Manual 180 pages. Bose 321 GS Series II Home Cinema System User Guide Manual Operating Instruction. Bose 321 GS Series II User Guide Manual Bose 321 GS Series II Cinema System. Bose 3 2 1 Series li Manual This system works great, with remote and owners manual. BOSE AV 321 Series II 321 Home Theater System Media Center DVD Player ONLY. Bose Manuals. Retrevo provides Select one of the categories below to find the User Manuals for your Bose product Bose 321 GSXL User Guide. 321 GS. Bose Bose 3 2 1 Series li Manual The bose 321 series 1 owners manual is available for download. Bose Cinemate Series li User Manual download. Were committed to providing the tools and information you need to support the lasting value of your Bose products. Code of ethics example letters, Illinois short form power of, Example of websites, Panasonic dmr e20 manual, Robot modeling and control solution manual. Reload to refresh your session. Reload to refresh your session. Page Count 87 It will help you set up and operate your system properly, and enjoy all of its advanced features. Save your owner' s guide for futur e reference. W ARNING T o reduce the risk of fire or electric shock, do not expose the sy stem to rain or moisture. W ARNING This apparatus shall not be exposed to dripping or splashing, and objects filled with liquids, such as vases, shall not be placed on the apparatus. As with any electronic products, us e care not to spill liquids in any part of the sys tem. The exclamation point within an equilateral tr iangle alerts the user to the pr esence of impo rtant operating and maintenance instructions in this ow ner' s guide. CAUTION T o prevent electric shock, match wi de bl ade of plug to wide slot, insert fully.

CAUTION No naked flame sources, such as light ed ca ndles, should be placed on the apparatus. CAUTION Use of controls or adjustments or performanc e of pr ocedures other than th ose specified herein may resu lt in hazardous radiation exposure. The DVD pl ayer should not be adjusted or repaire d by anyone exce pt properly qualified service personnel. Class B emissions limits This Class B digital appara tus meets all re quirements of the Canadian InterferenceCausi ng Equipment Regula tions. Batteries Please dispose of used batteries proper ly, following any local regulations. Checking for region code compatibility For a DVD player and DVD disc to be compatible, their region code numbers must match. These numbers are allocated ac cor ding to where th e player and disc are sold. Then be sur e to choose only DVD discs that show th e same r egion number on the disc label or front cover. For example, a Region 1 DVD disc should display the following mark It is the width of the picture relative to the height. Our standar d TV picture, in terminology used by that industry, is 4 units wide by 3 units high, or 43 read as 4 by 3 in aspect ratio. It provides the highest level of video quality. NTSC and P AL are exam ples of composite video systems. A television format used e xtensively in W estern Euro pe. Not compatible with all video displays. Sometimes used interchangeably with DVR for Digital Video Recor ding, but may include nondigital technology, as used in VCRs. Most highend televisions have Svideo inputs. Please fill out the information section on the card and mail it to Bose. Failure to do so will not af fect your limited warranty rights. Save all packing materials, which pr ovide the safest way to transport your system. For Bose contact information, refer to the address sheet included in the carton. W ARNING T o avoid danger of suffocation, keep t he plastic bags out of the reach of children. Pleas e re co r d them here and on your Product Registration Card.

<http://www.drupalitalia.org/node/76919>

Positioning the media center CAUTION Do not bloc k any ventilation openings. F or reliable operation of the product an d to protect it from overheating, p ut the product in a positio n and

location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. IR infrared commands from the remote control. Figure 2 Sample media center and speaker placement Right speaker Left speaker 3 ft 1 m. CAUTION Choose a stable and level surface for both speakers. Vibration can cause the speakers to move, particularly on smooth surfaces like marble, glass, or highly polished wood. If you are placing the speakers on a flat surface, be sure to attach one set of the small rubber feet to the bottom surface of each speaker. To contact Bose, refer to the list of offices included in the product carton. Note The speakers can be mounted on Bose brackets, table stands, or floor stands. For ordering information, refer to "Accessories" on page 65. Additional or longer cables may also be ordered. Do not place the speakers at an angle. Angling one or both speakers into or away from the listening area significantly alters system performance. Figure 5 Recommended orientation of the module AC INPUT MUSIC CENTER CAUTION Do not block the openings on the back of the module, which provide ventilation for the built-in circuitry. CAUTION The Acoustimass module generates a magnetic field. Although this is not an immediate risk to your video tapes, audio tapes, and other magnetic media, you should not store any of these items directly on or near the module. Plug the other end of the cable into the input jack on the rear of the Acoustimass module. Note The jacks for the Acoustimass module cable are keyed so that the cable connectors only plug in one way. Make sure that the arrow on the connector body faces up when plugging in the cable.

<http://gemabazan.com/images/canoscan-d646u-manual-pdf.pdf>

Figure 6 Acoustimass module to media center connection Acoustimass module input jack Acoustimass module cable Media center rear panel Acoustimass module rear panel Connecting the speakers to the Acoustimass module 1. Insert the single plug end of the speaker cable into the SPEAKERS jack on the rear panel of the Acoustimass module Figure 7. Tighten both screws on the plug. Figure 7 Speaker cable to Acoustimass module connection Acoustimass module input jack Acoustimass module cable Speaker cable Note If additional audio cables or longer cables are needed to make these connections, contact Bose Customer Service. Refer to the list of offices included in the product carton. Figure 8 Separating left and right speaker cords 3. Plug the LEFT speaker cable into the rear jack of the left speaker Figure 9. Plug the RIGHT speaker cable into the rear jack on the right speaker. Figure 9 Left and right speaker connections RIGHT speaker cable LEFT speaker cable Note Make sure cable connectors are fully inserted and seated firmly in the speaker jacks. Unwind the wires for each antenna to provide the best reception. Note An outdoor antenna may be used in place of the supplied indoor antennas. To add an outdoor antenna, consult a qualified installer. Follow all safety instructions supplied with the antenna. Figure 10 Antenna connections FM dipole antenna AM loop antenna Media center FM antenna Plug the FM antenna into the FM jack on the media center rear panel. Spread out the antenna arms and move them around to establish optimum FM reception. Extend the antenna as far from the media center and other equipment as possible. Experiment with positioning the loop for optimum AM reception. Follow the instructions enclosed with the AM loop antenna to stand it on the supplied base, or mount it to a wall. Connecting cable FM radio Some cable TV providers make FM radio signals available through the cable service to your home.

<http://www.indianantique.com/images/canoscan-5600f-manual.pdf>

This connection is made to the external FM jack on the back panel of the media center. To connect to this service, contact your cable TV provider for assistance. If necessary, contact your cable company. Insert the white RCA plug into the TV white L jack. Insert the red RCA plug into the TV red R jack. 2. Connect the other end of the stereo cable to the audio output jacks on your TV. Insert the white RCA plug into the white AUDIO OUT L jack. Insert the red RCA plug into the red AUDIO OUT R jack. Making composite video connections Note Some older TVs with standard TV cable connectors do not have a composite video or an S-video input. Such TVs are not compatible

with any DVD players and require use of an RF modulator for this connection. RF modulators are available at your local electronics store. 1. Insert one end of the supplied video cable yellow to the Video OUT C composite jack on the back of the media center Figure 11. 2. Insert the other end of the video cable into one of the video input jacks on your TV. Figure 11 TV composite video to media center connections Write the name of the video input jack used on your TV in the box on page 25. Insert the red RCA plug into the TV red R jack. 2. Connect the other end of the stereo cable to the audio output jacks on your TV. Insert the red RCA plug into the red AUDIO OUT R jack. 3. Insert one end of the supplied video cable yellow to the Video OUT C composite jack on the back of the media center. Insert the other end of the video cable into one of the video input jacks on your TV. Figure 12 Option A connections Write the name of the video input jack used on your TV in the box on page 25. Insert the white RCA plug into the AUX white L jack. Insert the red RCA plug into the AUX red R jack. 2. Connect the other end of the stereo cable to the AUDIO OUT jacks on your VCR. Insert the red RCA plug into the red AUDIO OUT R jack. 3.

Insert one end of the supplied video cable yellow into the VIDEO OUT jack on the media center. Insert the other end of the cable into one of the video input jacks on your TV. Figure 13 Option B connections Write the name of the video input jack used on your TV in the box on page 25. You will need a Y adapter cable available at electronics stores to connect audio to the media center. Otherwise, you will hear mono sound from both speakers. The following describes how to use these connections. Making Svideo connections higher quality video An Svideo input jack, provided on many TVs, delivers a higher quality TV picture than the composite video output connection shown in Figure 11. For this connection you will need an Svideo cable which can be purchased from your Bose dealer or a local electronics retailer. 1. Insert one end of the Svideo cable into the SVideo OUT jack on the media center. Figure 14 TV Svideoto media center connections Svideo cable Stereo cable red and white connectors Media center rear panel TV TV connector panel IMPORT ANT If you use Svideo to connect your TV to the media center, you must also use Svideo to connect all other. To turn on the progressive scan feature, see "Video options" on page 59. For the highest quality video from DVDs, you may want to use a component video connection between the media center and the TV. To do so, your TV must provide component video jacks typically labelled Y, Pb, and Pr. Refer to your TV owner's guide for more information. To make component video connections you will need a component video cable that is long enough to reach from the rear of the media center to your TV Figure 15. If the cable is not supplied with your TV, you can purchase it separately. 1. On the media center rear panel, plug one end of the component video cable into the Component Y, Pb, and Pr video output jacks Figure 15. Be sure to match the color of the plug with the color of the jack. 2.

[www.highlandmetals.co.za/wp-content/plugins/formcraft/file-upload/server/content/files/1626d76877c2cd---3m-accuglide-2-tape-head-manual.pdf](http://www.highlandmetals.co.za/wp-content/plugins/formcraft/file-upload/server/content/files/1626d76877c2cd---3m-accuglide-2-tape-head-manual.pdf)

Plug the other end of the component video cable into the corresponding color or letter code component video jack on the back of your TV. Figure 15 Component video TV to media center connections Media center rear panel Component video output jacks TV connector panel example Stereo cable red and white connectors Component video cable IMPORT ANT FOR COMPONENT VIDEO USERS Input signals received by the C Composite or SVideo IN jacks are not passed through to the Component video OUT jacks. If you connect an external video device to the C or SVideo IN jack, you must also connect the C or SVideo OUT jack on the media center to the respective video input jack on your TV. To view the external video input on your TV, you will need to select the TV video input used for that device. Y green Pb blue Pr red Note For more information, or to purchase the video cables, contact your local electronics store or authorized Bose dealer. Use an optical digital cable or a coaxial digital cable, as appropriate, to connect this output to the digital input on the media center. You can purchase the required cables at a local electronics store. On the media center rear panel, an optical digital cable connects to the OPTICAL jack. A coaxial cable connects to

the audio input jacks labeled D. Note Before you can benefit from the optical connection, you will need to assign the optical connector to the audio source in the system settings menu. See “Media center options” on page 60. Instructions and terminology pertinent to these external devices may vary, depending on the manufacturer. Consult the owner’s guide that came with the device for clarification on setup and usage before making any connections. Connect the video output of the game console to the Composite Video IN jack. Note Replace the batteries when the remote control stops operating or its range seems reduced.

If you are not sure about the proper voltage for your area, consult your local electrical authorities.

1. Insert the small connector end of the power cord into the AC INPUT connector on the Acoustimass module Figure 20. 2. Insert the large end of the cord into an AC power mains outlet. Note On 220/240V mode is only, turn the Acoustimass module POWER switch to on. If it does not, press the play button. Note Be sure to play the Setup DVD, included in the carton with your system, as soon as all the connections are completed. This will help you verify the connections you have made and confirm proper sound performance. Selects the Stored CD source and turns the system on to the last selected. TV Selects the TV sound source and turns your system on. Input Changes the external input to your TV. For example, your TV might have two external inputs where one is connected to your cable box and the other to your VCR. Displays the Settings menu for the current source on your TV screen or media center display. Confirms a menu selection or introduces the next level of menu options. Plays audio CD tracks in random order. Press again to cancel. Repeats a CD, CD track, DVD chapter, or DVD title depending on the selected source. Skips to the previous TV channel if supported by your TV or. Plays the tracks from a CD selected by its number in the uMusic system. Plays all the tracks, if any, assigned to the playlist. Can be used with other play mode options, like Encore. Skips from the track most recently playing to the first track on the CD of origin and plays that CD from beginning to end. Note More than one code may work with your particular brand of product. If you notice a lack of response or limited functionality after setting up the remote, try a different code. Note The remote status LED flashes rapidly eight times if you press an invalid key, or enter an unavailable device code. Wait seven seconds for the error to clear and start again.

Direct entry of a device code Device codes can be found at the back of this owner’s guide or in the System menu under Remote Control options. The LED will turn off temporarily as you press each key. 4. Check that the LED turns off after the code is entered. If the LED blinks, the code is invalid. Try again. 5. Point the remote at your TV and press the TV On/Off button. If your TV does not respond, go back to step 2 and try other codes. If you are still unsuccessful, see “Searching for a device code” on page 31. The LED will turn off temporarily as you press each key. The LED will turn off temporarily as you press each key. 4. Check that the LED turns off after the code is entered. If the LED blinks, the code is invalid. Try again. 5. AUX AUX Point the remote at your VCR or PVR and press the AUX On/Off button. If your VCR or PVR does not respond, go back to step 2 and try other codes. If you are still unsuccessful, see “Searching for a device code” below. Searching for a device code Use this method if you do not know the code for a device. Note This is a very time-consuming process. Use it as a last resort. If your TV does not respond, go back to step 2 and try again. This is the second digit. 5. Press 3 on the remote and count the number of times the LED blinks zero is indicated by a long blink. This is the third digit. 6. Press 4 on the remote and count the number of times the LED blinks zero is indicated by a long blink. If the change was made, press Exit. If not, repeat steps 2 and 3. Steps through the available source selections. Lowers and raises the volume level. Opens or closes the disc tray. Copies tracks from an audio CD into the music library. Note If you select another source by pressing the Source button, you cannot control the new source with the remote until you press the button for that new source on the remote.

Display indicators With the system turned on, the media center display lights up to show the state of



the system. Not all possible choices, shown below, light up at once (Figure 22). The display changes with each adjustment or selection you make. Indicates repeat mode is selected for current track or disc. Indicates "Repeat Disc" or "Shuffle Repeat Disc" mode is selected. Indicates "Repeat Track" mode is selected. Lights briefly when a remote control command is received. Lights to indicate disc is in play. Note Not all DVDs offer the same features. For example, you can choose to display subtitles while watching a movie only if that particular disc provides subtitle information. Press Play to resume from the point of interruption. Note For information on changing DVD-related source settings, see "DVD settings menu" on page 51. Restricting access to video DVDs The DVD Lock menu allows you to restrict access to DVD content that is inappropriate for certain members of your family. For instructions on using the DVD Lock menu, see "DVD Lock options" on page 62. Press Shuffle again to turn off the shuffle mode SHUFFLE OFF. Note For information on changing CD-related source settings, see "CD settings menu" on page 50. Note While playing an MP3 CD, pressing Info displays artist and title information on the media center display panel. Press Seek to go to the next available station. Press and hold for rapid tuning. Release to stop at the next available station. To stop anytime, briefly press Seek or Seek. Press Preset to select the previous stored station. This enables you to tune to a favorite station quickly. 1. Tune to the preferred station. 2. Press Enter on the remote to store the station at the next available preset number. OR Enter a number on the remote using the numeric buttons. For numbers 1-9, press the. For numbers 10-20, press the first number followed immediately by pressing and holding the second number.

The newly stored preset number appears briefly on the media center display. Note Storing a station to a preset number replaces any station previously stored to that preset. Erasing a preset 1. Tune to the preset station. 2. Press and hold the 0 button on the remote until the media center display tells you that the preset is erased. Note Your system is designed to store tracks of regular CDs only. It will not store MP3 tracks or the contents of DVDs. If an inappropriate disc type is in the disc tray when the Store button is pressed, the media center displays an error message to indicate that storage is not possible. To resume storing the same disc, close the disc tray and press Store again. If after storing several CDs the media center displays BUSY PROCESSING CDS, you will need to wait and allow the system to complete its process. The current track will stop and the system will select the next track. The current track will continue to play. A rating is also registered when you skip a track or listen to a track all the way through. However, the effect of pressing a Rating button is stronger than either of these two actions. You can also rate your stored music from within the Music Library. See "Rating stored music in the library display" on page 47. When the CD is finished playing, uMusic playback resumes. The nine presets can be used to establish music preferences for different family members or for special purposes or occasions. If you wish, you can enter a name for each preset to help you remember how it is used. To select a uMusic preset 1. Press Stored. 2. Press 1 to 9 on the remote for the preset you want. A P followed by the preset number is displayed on the media center to verify your choice. See "Using the Edit Screen" on page 56 for instructions on using the edit screen. 8. Select Done at the top right corner of the screen and press Enter. 9. Press Exit to leave the System menu.

The Playlist can contain as many tracks as you have stored in your media center. To add the currently playing song to the playlist Press and hold Playlist until ADDED TO PLAYLIST is displayed on the media center. To listen to the Playlist Press Playlist briefly. The tracks in the playlist play in order. Press the uMusic button to leave the playlist and return to the uMusic playback mode. To repeat a track or play the tracks in random order, see "Repeat and shuffle functions" on page 42. To remove a track from the Playlist While listening to the track in Playlist mode, press and hold Playlist until REMOVED is displayed on the media center. The track is removed from the playlist but not from the system. To add songs to the Playlist by track, album, artist, or genre 1. Press Library. 2. Use the navigation buttons to browse through your stored music collection. The Music Library screen on your TV also indicates that a track, or one or more albums have been added to the

Playlist. To remove all tracks from the Playlist Before building a new playlist, you may find it easier to clear the play list of all its songs. 1. Press System. 2. Select Media Center options. Press Enter. 3. Select uMusic Preset Action. Press Enter. 4. Select Clear Playlist. Press Enter. 5. Press Exit to leave the System menu. Finding stored music 1. Press Library. The Music Library display Figure 29 appears on your TV. Information also appears on the media center display Figure 30. Figure 29 Onscreen Music Library display Items list Summary of Preset Music Library Preset 1 Genre All genres . Artist All artists .Figure 30 Example of Library information on the media center display Artist All Artists LIBRARY First find the item in the library display. The display confirms your rating Figure 31. Figure 31 Example of rating indicator in the music library display Music Library Preset 1 Genre All genres .

This catalog includes 30 different characteristics about each CD such as style, tone, related artists, key influences, and musicians. This is the information that makes the uMusic intelligent playback system work. Periodically, Bose issues a system update disc to make sure system owners have the most up-to-date music catalog. To receive future updates, be sure to register your system by mailing your completed Product Registration Card to Bose. If indicated on your card, you may be able to register using the Internet. For that purpose, each source you use with this system has its own Settings menu with features appropriate to that source. To view the settings menus You can see the Settings menu for each source on your TV screen Figure 32 and on the. If the list of menu items is too long for the screen, a small down or up arrow indicates that you need to scroll down or up to see other items. 4. Press Exit to leave the Settings menu. Figure 32 Sample Settings menu on your TV screen FM Output Mode Auto Source name Menu items Menu item name Setting Navigation help which buttons to use Selection box Note Any changes made in the settings menu on your TV screen will also appear in the media center display panel. On the media center display panel, menu items will scroll in and out of view as you press the up and down arrow buttons on the remote. You can use the actions above to change back to the original default settings, too. Do that if you do not like the effect of a change you have made, or accidentally made a change you did not intend. The progression in Figure 34 shows output mode for the FM tuner being changed from Auto to Stereo. Figure 34 Changing the FM output mode setting FM Output Mode Auto FM Output Mode Auto FM Output Mode Stereo The down arrow button was pressed to select the Output Mode menu item. The right arrow button was pressed to select the setting.

<http://www.drupalitalia.org/node/76920>